

## Shrink Tank 62.41i

Fault	Cause	Action
Machine does not appear on display after the <b>ON</b> key is pressed.	Main plug not in circuit. Breaker has cut out. Fine-wire fuses have melted. Main switch is not on. Main switch is faulty. Fuses on site have gone. Electronics board is faulty.	Insert plug. Press in circuit breaker. Replace fuses. Switch on main switch. Check main switch. Replace. Replace electronics board.
Machine message on the display (1): ATTENTION DRY-RUN!“	Water level too low and heating switched on.	Top up with water.
Water not heating properly	Heating element faulty. Heating element furred up	Contact VC999 Customer Service. Clean heating element, removing lime deposits.
Bag is not shrunk correctly.	Water level too low.	Top up with water.
Immersion platform does not submerge or rise evenly	Drive or bearings worn	Servicing by VC999 service personnel.